



Dear Videographer,

We would like to thank you for your recent purchase of the “Equinox HD10” underwater video housing. If at anytime you have any questions about your new housing or other fine products, please do not hesitate to call us directly. We take great pride in the fact we are always available to our customers.

For questions or info please call or email:

**Equinox Housings**  
**276 Sparks Ave. Ste B**  
**Galesburg, MI 49053**  
**Ph: 269.381.2101 Fax: 269.585.6147**  
[sales@equinoxhousings.com](mailto:sales@equinoxhousings.com)  
[www.equinoxhousings.com](http://www.equinoxhousings.com)

## **Housing Assembly**

To begin assembly of your new HD10 housing, remove all items from the box.

### **Box contents:**

- 1 Underwater housing body
- 1 Front faceplate
- 1 Rear faceplate w. LCD mounted
- 2 Lead Handles
- 1 Carrying Strap
- 1 LCD monitor, battery and charger kit
- 1 E.O. waterproof plug for video out
- 1 Parts kit
  - Items inside part kit include:
    - 3 10inch O-rings
    - 2 O-ring grease cups
    - 2 Thumbscrews
    - 2 Quick release pins
    - 3 Rubber Washers
    - 2 Camera-mounting screws
    - 1 Gear belt
- 1 Extra Parts Kit

Follow the steps below to assemble your new housing.

1. Remove all protective plastic from the housing.
2. Remove the camera-mounting tray from the housing by removing the 2 thumbscrews from the rear of the camera tray.




3. Attach mounting plate to the camera using the mounting screw. The tray will have a hole for the screw and mounting pin that will align your camera to the tray in the correct position. Check the location of the spin dial on the tray to make sure it lines up with the iris dial on the camera.



4. Pull out all of the controls so that they are extended as far as possible outside of the housing. Then, carefully slide the camera/mounting plate into the housing, you may need to turn the camera/mounting plate slightly to clear some control knobs.



5. Place the gear belt around the camera's manual focus ring and then around the gear attached to the inside of the housing. Rotate the outside knob to make sure the gear is functioning properly.
6. Secure mounting plate to housing firmly with 2 thumbscrews. Do not over-tighten.

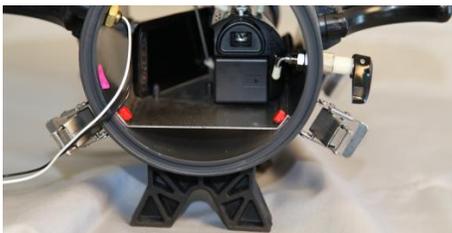

7. Once you have secured the camera in the housing, lightly lubricate the O-ring and gently press it into the O-ring groove in the front of the housing.
8. Align the faceplate hooks with the housing clamps. Make sure that the index dot is up, at the top of the housing. Secure the clamps and strikes. For the best results, lock 2 clamps at a time that are located across from each other.



9. Look into the rear of the housing and gently push in the controls. Visually inspect the mechanical process of moving each control.
10. Repeat steps #7 and #8 to secure the rear faceplate.



11. Slide the black wing into the female receiver on the housing. Lock it into place with the quick release pin. To determine which wing to use on each side, the pocket located on each wing should be pointed down.



12. Slide the handle up from the bottom of the wing, exposing the threaded bolt through the top of the wing. The top of the handle will fit into the pocket on the wing.\*



13. Place one rubber washer over the top of each threaded bolt.
14. Twist one four-arm knob on to the threaded bolt until tight. This will secure the handle to the wing. Repeat for other side



15. Visually inspect the front and rear o-ring to make sure you have a good seal. Double check all of the control alignments and make sure the quick release pins are in each wing.
16. Check all safety latches for security, by lifting on the latch tab.

\*If you are using underwater lighting systems, place the light arm adapter over the rubber washer and tighten knob to secure adapter.

Congratulations you have successfully assembled your new housing and are ready to begin capturing some of your greatest adventures on video!!

At your convenience, within 30 days of receiving your housing please fax to Equinox Housings a copy of your completed warranty slip. FAX: 269.585.6071 Or register your warranty online. Warranties voided if unregistered.

#### RECOMMENDED ACCESSORIES FOR YOUR HD10 Housing

1. WATER TIGHT TRAVEL CASE FOR HOUSING	\$444.99
2. BIG BLUE VIDEO LIGHTS	\$619.00
3. TOP MOUNT 4.3 INCH MONITOR	\$1250.00
4. SPARE PARTS KIT	\$99.00

CHECK OUT MORE ACCESSORIES AT [WWW.EQUINOXHOUSINGS.COM](http://WWW.EQUINOXHOUSINGS.COM) OR CONTACT AN AUTHORIZED EQUINOX HOUSINGS DEALER